

Assembly guide

URBANIA FIREPLACE




Repeat steps 11 and 12 for the other side.

Insert the two rods to fix the spark arrester.

Place one side of the spark arrester on top of the tub.

Put down the cooking grill.

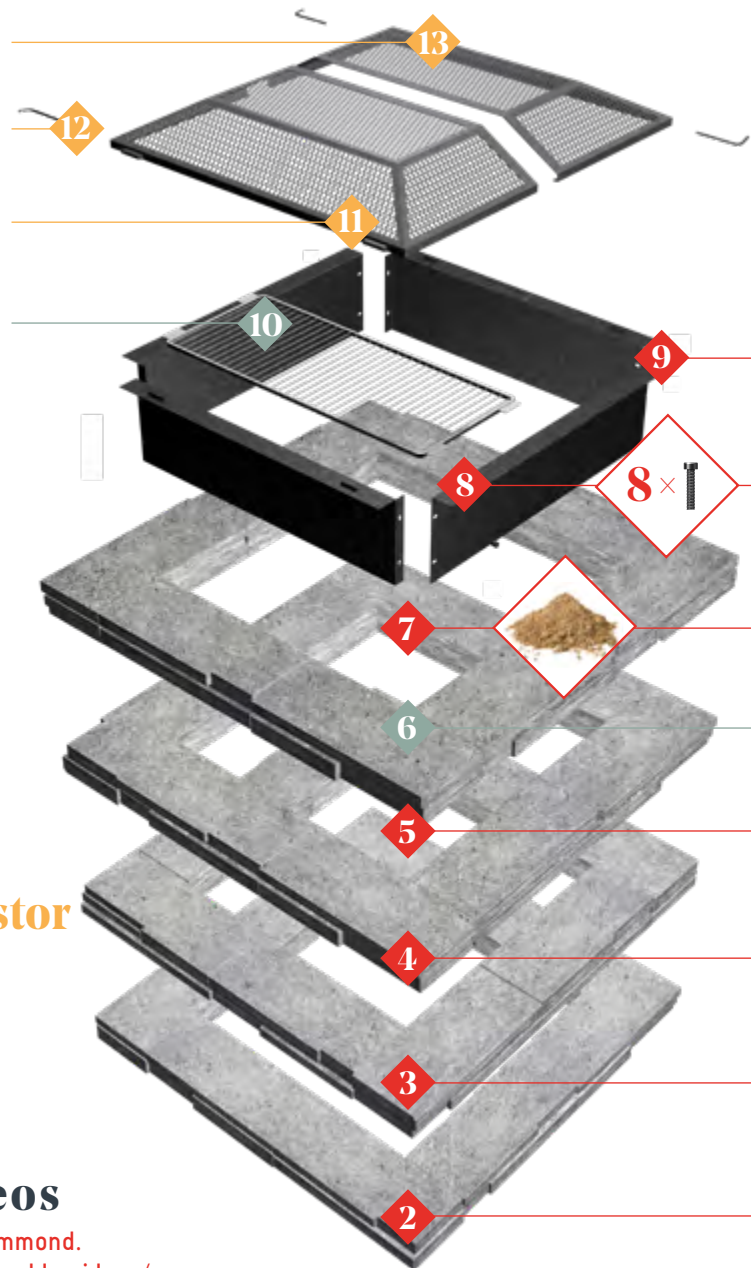

Insert the spark arrester tub into the fireplace.

Insert the 8 screws to join the 4 parts of the inner tub together before inserting the tub into the fireplace.

Add sand to the bottom of the fireplace up to the tub to protect the blocks from the flames.

Optional: add 1 or 2 rows for a higher fireplace.

Put 8 blocks by crossing the joints to make the 4th row.

Put 8 blocks by crossing the joints to make the 3rd row.

Put 8 blocks by crossing the joints to make the 2nd row.

Put 8 blocks in a square shape to make the 1st row.

Optional

Steps 6 and 10

The spark arrester

Steps 11,12 and 13

The blocks

Steps 1,2,3,4,5,7,8 and 9

Assembly videos

 <https://www.patiodrummond.com/en/fireplace-assembly-videos/>

Level your surface with 0-3/4 stone.



The total exterior dimension of your fireplace will be 46" x 46".

Caution

Sprinkling the blocks with water following a fire can cause thermal shock resulting in damage.

This fireplace is designed for ambient fires.

Patio Drummond declines all responsibility regarding its optional accessories. Please follow your municipality's guidelines regarding outdoor fireplaces.

